

# POPCORN INSTRUCTIONS

## CONTROLS & OTHER FUNCTIONS

There are 3 switches on the popper.

1. **Light & Warmer Switch:** Turns on the heat to the bottom corn pan and heat light.
2. **Kettle Motor Switch:** Turns on the motor that stirs the popcorn in the pan.
3. **Kettle Heat Switch:** Turns on the heat to the kettle.

1. Plug machine in. No extension cords, no plug adapters.
2. Turn on all 3 switches (warmer, motor & heat).
3. Allow kettle to heat up for 4-6 minutes from cold start.
4. Carefully lift lid on kettle by lip
5. Cut across top of premeasured popcorn kit package.
6. Add entire contents of one kit to kettle.
7. Close lid & close door to popper partially (leave small space for moisture to escape or popcorn will get soggy). **STAY BY MACHINE FOR POPPING.**
8. When popping is finished, dump kettle by turning handle downward.
9. Return kettle to engaged upright position.

Repeat steps 4-9 until you have enough popcorn for a while.

When you are finished popping, turn **OFF** motor Switch and Kettle Heat Switch. Leave light **ON**.

Wash with warm soapy water to clean – DO NOT USE WINDEX OR OTHER AMONIA BASED CLEANERS!!

If you have any questions, please contact our staff at [Oakdale Rental Center](#)  
[651-777-4825](tel:651-777-4825)